

## Safety Instructions and Warnings

#### **Intended Use**

Product to be used as a lamp. Read and understand the operating manual.

Strictly follow the instructions. (refer to www.zweibrueder.com).

# **About the Product**

Do not swallow small parts. Keep small parts out of reach of children. The product is not suitable for children.

The product should only be used as intended. Strictly follow the instructions.

Strictly follow the instructions in the enclosed Quick Start Guide regarding the specifications of permitted batteries.

### **Notes on Ambient Conditions**

Only use the product in a temperature range between -20 and 60 °C. Avoid direct and durable sunlight. Avoid high humidity and/or moisture.

Do not expose the product to solvents and/or vapors.

Do not use the product in an explosive atmosphere.

Do not expose the product to strong vibrations.

# **Notes on Handling of Product**

Do not wear products with head-band around your neck.

Do not use the product as a tool. Risk of heat build-up e.g. if the product is covered during operation. The LEDs of the product correspond to the risk group 2 according to DIN EN 62471-1.

Risk of blinding!

Do not look directly into the beam of light. The light beam should not be directed into the eye.

Do not use the product for eye examinations (eye pupil examinations). Increased risk of blinding. The eye's ability to respond decreases under the influence of drugs, medicines, alcohol.

Risk of retinal lesions. The product emits blue light (400-780 nm). Do not look directly into the beam of light.

Do not use any light-bundling instruments together with the product. Do not short-circuit the contacts of the product.

Products with permanent magnets are a danger for persons with heart pacemakers. They should always keep a safety distance to the components with permanent magnet.

If you do not use the product for a longer period of time, remove the batteries from the product.



### Notes on Maintenance/Repair

LED LENSER<sup>®</sup>

Do not modify or adapt the product. Repairs and maintenance must only be carried out by authorized personnel. For customer service, refer to www.zweibrueder.com

#### **Notes on Batteries**

Never use batteries and rechargeable batteries together. Consult the enclosed Quick Start Guide to know whether batteries and/ or rechargeable batteries may be used for this product. Store batteries/ rechargeable batteries out of reach of children. Never expose batteries/ rechargeable batteries to temperatures over 60°C (e.g. direct sunlight) or to open fire.

Do not expose batteries/rechargeable batteries to moisture.

Do not short-circuit batteries/
rechargeable batteries.

Observe the polarity.

Do not recharge batteries.

Do not damage or open batteries/
rechargeable batteries.

Do not use rechargeable batteries
or batteries capable of high current
for battery-operated products.

Do not use full and empty batteries

or old and new batteries together.

Always replace the complete set of batteries/rechargeable batteries. Only recharge batteries with a suitable charger.

Regularly recharge batteries (approx. every 3 months) if they are not used for a longer period of time. Dispose of the batteries according to the national guidelines.