

# Removal/Installation Tool for Fuel Return Line









KL-0289-20






0289-20e160608.docx

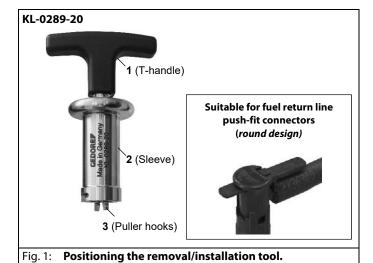

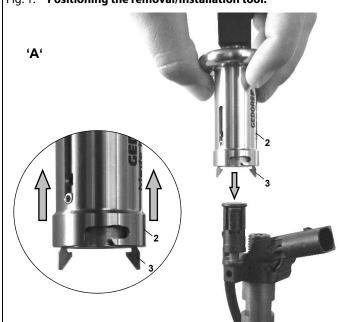

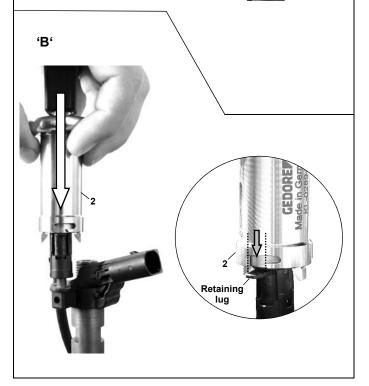

# KL-0289-20 Removal/Installation Tool for Fuel Return Line

Suitable for VW-Audi, Seat and Skoda 2.0, 2.7 and 3.0 TDI Common Rail Diesel engines;

as fitted to: VW Eos, Golf V, Golf VI, Jetta, Passat, Passat CC, Scirocco, Tiguan, Transporter T5, Phaeton; Audi A3, A4, A5, A6, A7, Q5; Seat Exeo; Skoda Yeti etc.

(Engine codes: BMK, BPP, CAAA, CAAB, CAAC, CAAD, CAAE, CAGA, CAGB, CAGC, CBAA, CBAB, CBAC, CBDA, CBDB, CBDC, CDUD)

#### **Field of Application**

Designed to professionally unlock/remove as well as install/lock the fuel return line push-fit connector (**round design**) at the injectors.

An indispensable tool when removing fuel return line push-fit connectors. Improper disassembly techniques may damage the connector resulting in the complete fuel return line in the engine compartment to be replaced.


#### **Example of Use:**


The following instructions describe how to unlock/remove a fuel return line push-fit connector (<u>round design</u>) from the injector.

- Pull back sleeve '2' of the removal/installation tool to allow puller hooks '3' to open. (Fig. 1 A)
- Place removal/installation tool on the injector push-fit connector to be unlocked. (Fig. 1 B)

#### Note:

When mounting the tool, pay attention to the correct position of sleeve '2' relative to the retaining lugs of the push-fit connector!

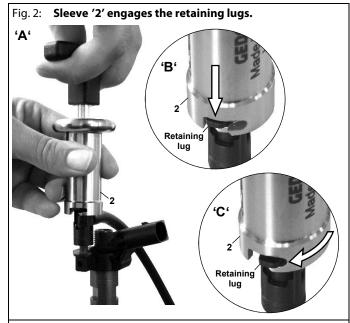

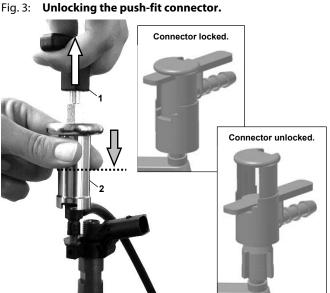

Retaining lug

Pulling off the push-fit connector.

3. Slide sleeve '2' downwards over push-fit connector as shown in Fig. 2 A + B.

Next, turn removal/installation tool in clockwise direction until sleeve '2' engages the retaining lugs of the push-fit connector. (Fig. 2 C)

4. To unlock push-fit connector, pull T-handle '1' on removal/installation tool upwards while at the same time pushing and holding down sleeve '2'. (Fig. 3)

#### Note:

In its factory setting, the push-fit connector is provided with a glue dot causing increased resistance that needs to be overcome when opening the connector.

 Remove push-fit connector by pulling it <u>straight</u> off the fuel return line with T-handle '1'. (Fig. 4 A)

Attention: Collect escaping fuel.

6. Remove push-fit connector from tool. To do so, turn removal/installation tool counter-clockwise and pull back sleeve '2'. This will allow the sleeve to disengage the retaining lugs and the puller hooks '3' to open. (Fig. 4 B + C) Withdraw removal/installation tool from push-fit connector.

#### Note:

Installation of push-fit connectors takes place in reverse order.

### Narnings and Notes

- Before putting the tool into operation, carry out a visual check to make sure that it is not damaged.
- Always refer to the vehicle manufacturer's data and instructions as only these apply to all work that is carried out on the vehicle.
- All vehicle-specific data stated herein are supplied under reserve and without commitment.
- Collect escaping fuel.



## **GEDORE Automotive GmbH**

Breslauer Strasse 41 78166 Donaueschingen

Postfach 1329 78154 Donaueschingen - GERMANY

Tel.: +49 (0) 771 / 8 32 23-0 Fax: +49 (0) 771 / 8 32 23-90

E-Mail: info@gedore-automotive.com

Internet: www.gedore.com

