

LASER[®]

8653

INSTRUCTIONS

Key Fob Tester

Infrared & Radio Frequency

IR:

When there is nothing within 5 meters of the infrared remote control, click the button.

Tester will display IR if there is normal function, but will remain blank if there is a fault.

RF:

Place the remote control below the LCD screen and press a button on your remote key fob.

A numeric frequency will be displayed on the LCD screen.

Powered by a 9V (PP3) battery (not included).

This tester is a sensitive electronic sensor, for reliable results use away from other sources of interference like mobile phones, computer and routers etc.

