


## INCIZO® SUB-PROFILE FOR VINYL STAIRS

### NEVINCPBASE

#### Product description


The Incizo® profile enables you to create stairs that fit perfectly into your interior.

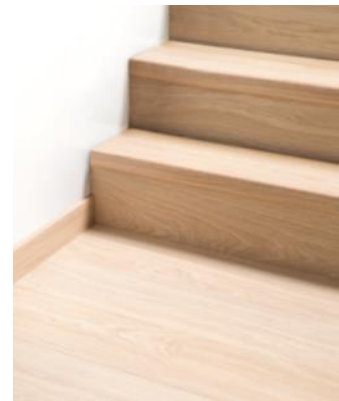

You need Incizo® profile + subprofile for stairs

The subprofile for stairs:

- Aluminum alloy 6060 T66
- Non anodized aluminium, not chromated

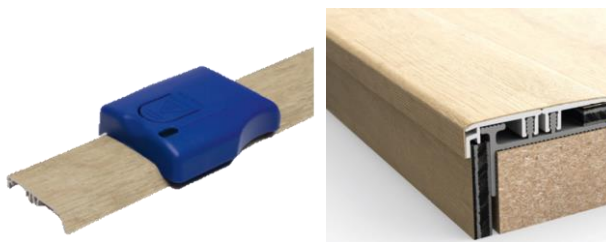

#### Installation-instructions

**WARNING:** READ AND FOLLOW THE SAFETY INSTRUCTIONS INCLUDED WITH POWER TOOLS USED. SAFETY GLASSES SHOULD BE WORN AT ALL TIMES.

Only for use in residential applications .

- Clear the stairs of debris, making sure that all stairs are clean and level.
- Use screws of 2,5 mm diameter. Drill diameter should be 3 mm.

## INSTALLATION



1. Start at the top of the stairs and work downwards.
  2. Measure the tread.
  3. Saw the aluminium subprofile to the right length.
  4. Apply glue to the bottom of the subprofile.
  5. Install the subprofile on the tread. Screw it to the stairs, with an interval of 15 cm. Make sure the screws are well countersunk.
  6. Saw a plank to the right size. If needed, click 2 planks together and only saw the groove of the last plank. \*For type H, saw the riser plank like this.
  7. Saw the Incizo® profile to the right length. Keep it in its protective incizo base; Cut off the reducer part of the Incizo® with the Incizo® knife – see instructions included in Incizo® packaging.
  8. Apply glue to the subprofile and the rest of the tread. Apply in rows of +/- 3 mm.
  9. Spread the glue out well on the subprofile (e.g. by means of a brush).  
It is important to move to the next steps without delay, so the tread is still adjustable when installing the Incizo® profile.
  10. Stick the Incizo® profile horizontally onto the subprofile and adjust the Incizo® and the plank nicely for a level result for the riser.
- Repeat installation for the rest of the stairs.  
After installation, do not walk on the stairs for at least 24 hours.

