



Manual

tapo-fix CB 70 X

Working Width 56 cm



Accessories (not included): CB-Counter, Sliding Cutter 67-70

1. Fill in paste

Put the CB 70 X on the table. Mix paste according to the manufacturer's instructions (if possible, uses special paste for Pasting Machines). Fill the paste tray up to 2cm below the edge.



2. Adjust paste thickness

Adjust the thickness of the paste with the adjustment Knobs on both sides. Set 1 for thin wallpapers, accordingly more paste for thicker wallpapers. After adjusting the thickness, tighten the Fixing Screw in the Knob.


Important: Do not expose the Roller to direct sunlight or heat. Clean only with cold water.



Accessories (not included): CB-Counter, Sliding Cutter 67-70

3. Insert wallpaper

Move the wallpaper rod up, thread the wallpaper on the rod and clip it down. Push the wallpaper lightly against the Springy Stop and then fix the Disc Stop. There should not be a gap.

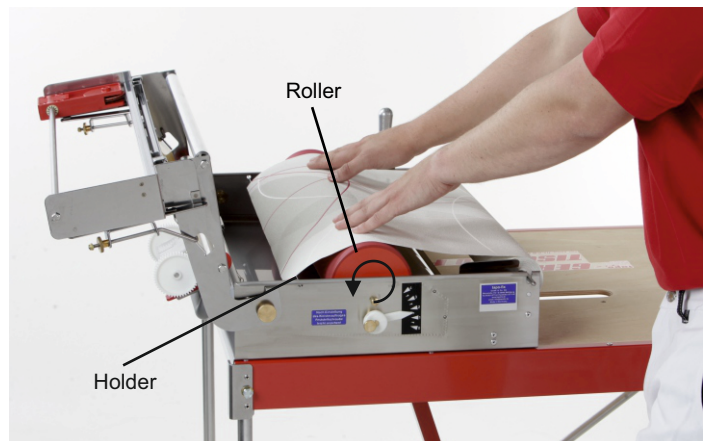

Accessories (not included): CB-Counter, Sliding Cutter 67-70


4. Apply wallpaper on the roller

Open up the top, turn the Roller till it's fully wetted with paste. Lay down the wallpaper on the Rolle and Hodlerr. Lead wallpaper on the Roller and close the top.


Important: Make sure that the back of the wallpaper runs over the Roller.



Accessories (not included): CB-Counter, Sliding Cutter 67-70

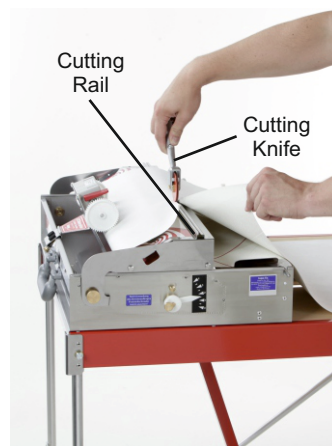

Accessories (not included): CB-Counter, Sliding Cutter 67-70

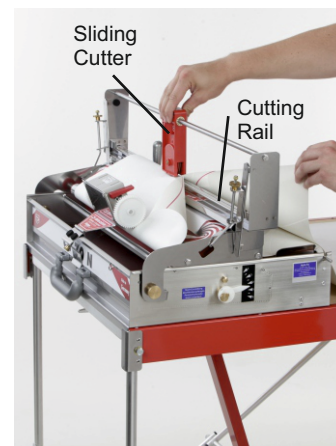

6. Cut the wallpaper (with Cutting Knife or Sliding Cutter)

Pull the Cutting Knife or the Sliding Cutter under light pressure through the Cutting Rail. Afterwards fold th wallpaper.

5. Paste the wallpaper

Pull the wallpaper to the Cutting Rail, set the CB-Counter to „000,00“. Tilt the corners and pull the wallpaper parallel to the table edge to the favored measure. If the length is longer then the table, fold the length and pull it to the favored measure. When working without the CB-Counter, measure the lentgh from the Cutting Rail. For pattern wallpaper, cut before the pasting or use the pattern table inside the top of the Pasting Machine.



Accessories (not included): CB-Counter, Sliding Cutter 67-70



Accessories (not included): CB-Counter



7. Drain the paste

To drain the paste for transport or cleaning pull the Pasting Machine to the right side over the table. Make sure it does not tilt. Put a bucket underneath. Pull the Closure Cap and lift up the top. Push the paste leftovers to the drain hole with the Cleanig Slider.

8. Cleaning the Pasting Machine

During daily use, the Pasting Machine must not be cleaned. Only under heavy pollution or before a longer break before the next use, the Pasting Machine should be cleaned with cold water. After darining the paste and unmounting the top, remove the paste roller from the machine. By simultaneously turning the Roller and pushing the hand under it, the Roller will pop out of the holder.

Important: Turn the adjusting Knob to the end before removing the Roller, as well before longer breaks, to make sure there is no paste at the Scraper.

